



FOS Spot 40W



PRODUCT SPECIFICATIONS

TECHNICAL SPECIFICATION

Voltage: 110/240 Volt AC, 50/60 Hz.

Power Consumption: 100 Watt.

Light Source: 40 Watt LED

Colors: 9 filters + White.

Gobos: 11 fixed gobos + open.

Control: Auto, Music, DMX

DMX Channels: 10 / 12.

Protection Class: IP20 (for indoor use only)

Width: 226 mm

Depth: 150 mm

Height: 325 mm

Weight: 5,1 Kg

SAFETY WARNING

This product must be installed by a qualified professional. All maintenance must be carried out by a qualified electrician. A minimum distance of 0.5 m must be maintained between the equipment and a combustible surface. The product must always be operated in a well-ventilated area. DO NOT stare directly into the light source. Always disconnect the power before carrying out any maintenance. The

earth must always be connected to the ground. Ensure that all parts of the equipment are kept clean and free of dust.

PROTECTION AGAINST SOLIDS AND WATER

Only for IP-rated fixtures

The protection level of a housing is set by applied standards. For classification there is used the IP-Code. It contains the declaration „IP“ and two following numbers. The first number characterizes the protection against harmful effects of solids, the second is rating the water protection. It is important to distinguish whether encapsulation and harmful effect! There can be housing that is not capsuled completely but still avoids harmful effect of solids or water.

PROTECTION EXAMPLES:

IP20: Protection against intruding objects >12,5mm „Finger protected “; No waterproofing. **TYPICAL PROTECTION FOR INDOOR USE FIXTURES**

IP33: Protection against intruding objects >2,5mm; Falling water within an angle of 60° has no harmful effect **TYPICAL PROTECTION OF LED-LIGHTS USING RECESSED POWERCON AND DMX SOCKET.** This protection is linked to the mounting position of the fixture and always refers to typical mounting situation like a Floor spot used standing on the ground.

IP54: complete protection against solids and low-pressure water from any side **THIS TYPE OF FIXTURES CAN BE USED UNDER NORMAL OUTDOOR CONDITIONS.**

IP65: shielded against dust and pressurized water from any side. **TYPICAL PROTECTION FOR OUTDOOR RATED EVENTFIXTURES USING WATERPROOFED POWER AND SIGNAL LINK.**

IP67: shielded against dust and protected for accidental briefly submerge. **PROTECTION AGAINST ACCIDENTAL SUBMERGING ON TEMPORARY FLOODED AREA.**

TEMPORARY USE

Event equipment is designed for temporary use. This are typical purpose as concerts, festivals, theatre, clubs and disco use and referable venues. Long-term use, specially under outdoor conditions and fixed outdoor installation can bring damage in aging materials and affect the coated surface. Sealings as well

as cables are made from rubber material and will age by long-term UV-emission as sunlight and should be checked frequently.

LIMITATIONS OF IP PROTECTION

IP-Rating doesn't mean unlimited outdoor use and protection against any kind of environmental influence! Especially sunlight and included UV will bring accelerated aging. Some fixtures need special parts or processes to fit the rated IP-Protection, like mounting covers or caps or similar. Sealings and other plastic or rubber materials are aging parts. They must be checked frequently to ensure the protection and safety of the fixtures. Also specified torque of screws can affect protection!

Installation

Hanging: The fixture can be mounted in a hanging position using the supporting bracket. The bracket should be secured to the mounting truss or structure using a standard mounting clamp. Please note that when hanging the unit, a safety cable should also be used.

UPRIGHT: The fixture can be mounted in an upright or sitting position using the supporting brackets.



NOTE! If the signal cable is over 60 m between the DMX512 controller and fixture or between two fixtures, then a DMX signal amplifier is needed as well.

Menu Screen

You can easily navigate through menu's options with the four buttons under the screen. Navigating in the menu is simple! With the Up / Down buttons, you are moving through menu's choices, pressing Enter, you are entering the sub menu of the option you have chosen, with the Up / Down buttons you're moving through the sub menu's options, with Enter, you are confirming your choice. The **FOS Spot 40W** offers the following options:

DMXAddr: Set the DMX address

WorkMod: Choose between **DMX512**, **AUTO**, **SOUND** working modes.

Tool: Choose from the sub menus

- **Display:** On / 60S for Display on and off time.
- **SundHig:** 1 – 16 for Sound sensitivity.

MotorST: Set the effect wheels and Pan / Tilt positions via the sub menus:

- **ColrREV:** 0 – 255 color wheel position
- **GoboREV:** 0 – 255 gobo wheel position
- **PrimREV:** 0 – 255 prism position
- **Pan REV:** 0 – 255 Pan position
- **Tilt REV:** 0 – 255 Tilt position
- **Xrevers:** Yes or No for Pan movement reverse
- **Yrevers:** Yes or No for Tilt movement reverse
- **XYfbstin:** Activate or Deactivate the Pan / Tilt movement.

Info: Check the Software Version of the fixture and the total working time.

Reset: Performs complete reset of the fixture.

Channel Modes

10 Channels

1. **Pan**
2. **Tilt**
3. **Pan / Tilt Speed**
 - **0 – 255** Gradual speed adjustment from fast to slow.
4. **Dimmer**
5. **Shutter**
 - **0 – 3** Shutter Open.

- 4 – 59 Synched strobe from slow to fast
- 60 – 63 Shutter Open.
- 64 – 123 Synched strobe from slow to fast (dif. Frequency)
- 124 – 127 Shutter Open.
- 128 – 191 Sudden strobe from low to high frequency.
- 192 – 195 Shutter Open.
- 196 – 253 Sudden strobe from low to high frequency.
- 254 – 255 Shutter Open.

6. Color Wheel

- 0 – 4 Open White
- 5 – 24 Red
- 25 – 49 Green
- 50 – 74 Blue
- 75 – 99 Yellow
- 100 – 124 Magenta
- 125 – 149 Orange
- 150 – 174 Cyan
- 175 – 199 Pink
- 200 – 225 Deep Blue
- 226 – 255 Color rainbow

7. Gobo Wheel

- 0 – 4 Open
- 5 – 25 Gobo 1
- 26 – 45 Gobo 2
- 46 – 65 Gobo 3
- 66 – 85 Gobo 4
- 86 – 105 Gobo 5
- 106 – 125 Gobo 6
- 126 – 145 Gobo 7
- 146 – 165 Gobo 8
- 166 – 185 Gobo 9
- 186 – 205 Gobo 10
- 206 – 242 Gobo 11
- 243 – 255 Gobo Scroll

8. Prism

- 0 – 15 No Prism
- 16 – 127 Prism Insertion
- 128 – 255 Prism Rotation from slow to fast

9. Macros

- 0 – 19 No Function
- 20 – 99 Auto Run
- 100 – 199 Sound Active
- 200 – 255 No Function

10. Reset

- 0 – 240 No Function
- 241 – 255 Reset after 5 sec.

12 Channels

1. Pan

2. Pan Fine

3. Tilt

4. Tilt Fine

5. Pan / Tilt Speed

- 0 – 255 Gradual speed adjustment from fast to slow.

6. Dimmer

- 0 – 255 Linear dimming from 0 to 100%.

7. Shutter

- 0 – 3 Shutter Open.
- 4 – 59 Synched strobe from slow to fast
- 60 – 63 Shutter Open.
- 64 – 123 Synched strobe from slow to fast (dif. Frequency)
- 124 – 127 Shutter Open.
- 128 – 191 Sudden strobe from low to high frequency.
- 192 – 195 Shutter Open.
- 196 – 253 Sudden strobe from low to high frequency.
- 254 – 255 Shutter Open.

8. Color Wheel

- 0 – 4 Open White
- 5 – 24 Red
- 25 – 49 Green
- 50 – 74 Blue
- 75 – 99 Yellow
- 100 – 124 Magenta
- 125 – 149 Orange
- 150 – 174 Cyan
- 175 – 199 Pink
- 200 – 225 Deep Blue
- 226 – 255 Color rainbow

9. Gobo Wheel

- 0 – 4 Open
- 5 – 25 Gobo 1
- 26 – 45 Gobo 2
- 46 – 65 Gobo 3
- 66 – 85 Gobo 4
- 86 – 105 Gobo 5
- 106 – 125 Gobo 6
- 126 – 145 Gobo 7
- 146 – 165 Gobo 8
- 166 – 185 Gobo 9
- 186 – 205 Gobo 10
- 206 – 242 Gobo 11
- 243 – 255 Gobo Scroll

10. Prism

- 0 – 15 No Prism
- 16 – 127 Prism Insertion
- 128 – 255 Prism Rotation from slow to fast

11. Macros

- 0 – 19 No Function
- 20 – 99 Auto Run
- 100 – 199 Sound Active
- 200 – 255 No Function

12. Reset

- **0 – 240** No Function
- **241 – 255** Reset after 5 sec.

General Information

Replacing a fuse:

Always disconnect the fixture from main power before replacing a fuse. Use only the appropriate fuse, with the same type and rating. A fuse with different rating, can damage the fixture in case of failure.

Risk of electric shock and / or fire:

The fixture must be earthed, supplied always with its nominal voltage and cleaned periodically from dust. For cleaning use only, a moist cloth. Never use liquids or force water. After cleaning, let the fixture dry before use.